

Pronto™ Track Installation

Accurate spacing is the key to a good Pronto changeable letter system. Refer to the diagram shown here to select the method of track installation you prefer and determine the total height of your sign. The use of dual track automatically spaces the rows and reduces the number of bars required. If row spacing needs to be greater use a combination of top and bottom tracks.

If the surface you are attaching Pronto Track onto will expand and contract at somewhat the same rate as the plastic track, installation can be done using either rivets or adhesive. Using a chalk line and level, mark the location for your first bar of track.


For a rivet installation: drill a hole through the track and background (maximum 8" center to center). To fasten track to 1/8" - 3/16" background, drill .219 diameter hole (3/16" drill bit). Insert the Pronto rivet, then push the pin to its closed position.

For an adhesive installation: Using a syringe or bottle applicator with a thin needle tip, apply a steady line of adhesive, such as WELD-ON #3 or #4, to the back face of the bar of track. Tape in place until adhesive has set up completely.

If the surface you are attaching Pronto track onto will not expand or contract (ie. wood or metal) at the same rate as the plastic track, we recommend the following installation procedure:

1. Drill or route horizontal oblong or oversized holes in the track.
2. Using a sheet metal screw, because of its squared shoulder; put the screw in the center of the horizontal hole.
3. Do not tighten the screw. Leave it approximately 1/4 to 1/2 turn loose.
4. When all the screws are in the track you should be able to wiggle horizontally a small distance.
5. Now the track is able to expand or contract with temperature changes, and shouldn't buckle or warp.

Mini acrylic dual track

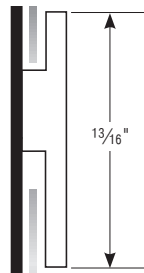


Made specifically for 3" & 4" Pronto Letters and locations where additional lines of copy must fit in your space. Track profile is only 13/16" high. Add 5/16" to visible opening chart below when installing mini dual track. Not to be used with standard profile track. See page 184 for pricing

Standard Pronto Track Charts

Lines of Copy Chart

1 Line of Copy	5 1/2"	3 Inch Letter
2 Lines of Copy	10 3/4"	
3 Lines of Copy	15 1/4"	
4 Lines of Copy	20 1/8"	
5 Lines of Copy	25"	
1 Line of Copy	6 1/2"	4 Inch Letter
2 Lines of Copy	12 3/8"	
3 Lines of Copy	18 1/4"	
4 Lines of Copy	24 1/8"	
5 Lines of Copy	30"	
1 Line of Copy	8 1/2"	6 Inch Letter
2 Lines of Copy	16 3/8"	
3 Lines of Copy	24 1/4"	
4 Lines of Copy	32 1/8"	
5 Lines of Copy	40"	
1 Line of Copy	10 1/2"	8 on 9 Inch Letter
2 Lines of Copy	20 3/8"	
3 Lines of Copy	30 1/4"	
4 Lines of Copy	40 1/8"	
5 Lines of Copy	50"	
1 Line of Copy	11 1/2"	8 Inch Letter
2 Lines of Copy	22 3/8"	
3 Lines of Copy	33 1/4"	
4 Lines of Copy	44 1/8"	
5 Lines of Copy	55"	
1 Line of Copy	13 1/2"	10 Inch Letter
2 Lines of Copy	26 3/8"	
3 Lines of Copy	39 1/4"	
4 Lines of Copy	52 1/8"	
5 Lines of Copy	65"	

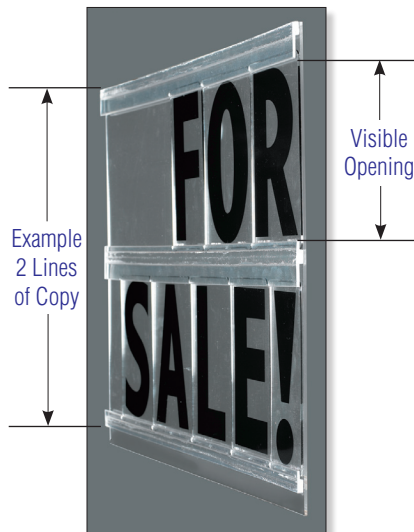

Visible Opening Chart

3 Inch Letter	3 1/4" Visible Opening
4 Inch Letter	4 1/4" Visible Opening
6 Inch Letter	6 1/4" Visible Opening
8 on 9 Inch Letter	8 1/4" Visible Opening
8 Inch Letter	9 1/4" Visible Opening
10 Inch Letter	11 1/4" Visible Opening